





Der D21x ist historisch bedingt in verschiedenen Designvarianten und mit unterschiedlichen Frontdichtungen und Lautsprecherfrontgittern verfügbar. Diese Anleitung ist universalgültig für alle Varianten.


- 1.1** Entfernen Sie die alte Gummidichtung der elektrischen Haupteinheit. Zurückbleibende Klebereste müssen nicht entfernt werden.

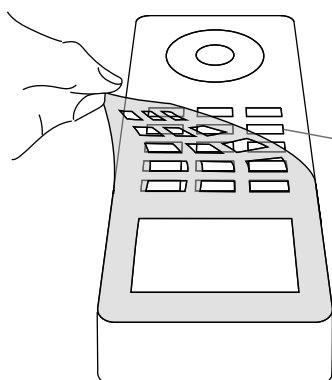



- 1.2 Modellabhängig:** Entfernen Sie die überstehende Justiernase an den beiden außenliegenden Lautsprecheröffnungen.

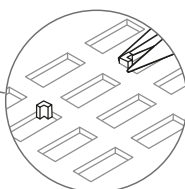


- 2** Legen Sie das Gitter auf die Lautsprecheröffnungen. Die Löcher für Lichtsensor, Mikro und Montageschrauben sollten übereinanderliegen.

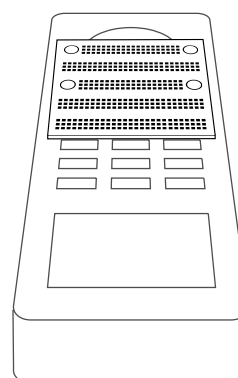

- 3** Ziehen Sie die neue Gummidichtung von der Trägerfolie und kleben Sie sie auf die elektrische Haupteinheit.

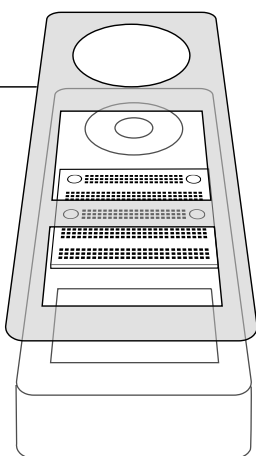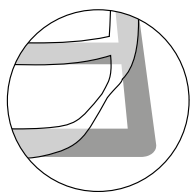

- 4 FERTIG.**

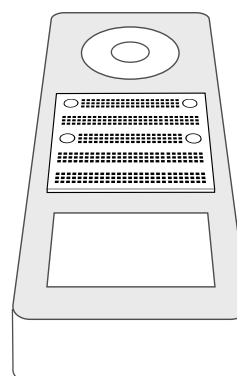



Quick guide

REPLACE THE RUBBER SEAL / SPEAKER FRONT GRILLE


D21x series




DoorBird
Technology meets Design.

The D21x is for historical reasons available in different designs and with different front seals and loudspeaker front grilles. These instructions are valid for all existing models.


- 1.1** Remove the old rubber seal of the electrical main unit. Remaining adhesive residues do not have to be removed.

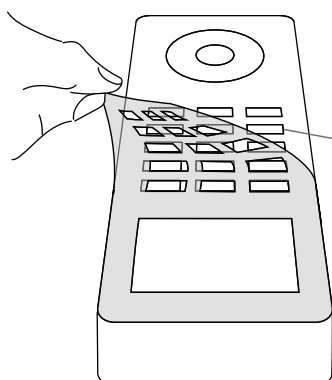



- 1.2** Depending on the model: Remove the overlapping adjusting gib on both sides of the speaker openings.

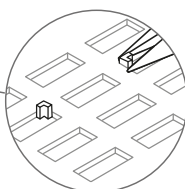

- 2** Place the grille on the speaker openings. The holes for light sensor, microphone and security screws should lie on top of each other.

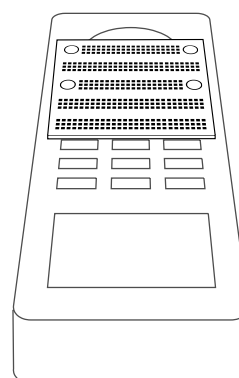

- 3** Pull off the carrier film of the new rubber seal and stick it on the electrical main unit.

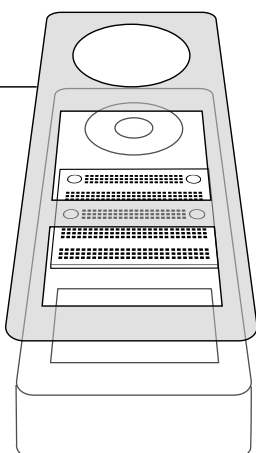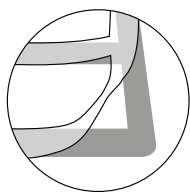

- 4 DONE.**

